

TRAKKER / EUROCARGO Euro 4/5 (Trucks & Midirider/Medium bus)

SYSTEM	Operation	HOW	Notes
IBC3	Change configuration	By Easy Stand Alone	SW 3.10 SW 4.00 SW 4.10
	Diagnosis	By Easy Stand Alone	
	ECU update SW 3.10/4.00-->SW 4.10	By Teleservices	
	ECU Replacement	By Easy Stand Alone	
Cluster (IC)	Change configuration	By Easy Stand Alone	SW 4.14./ 4.17 / 4.20
	ECU Replacement	By Easy Stand Alone	
	Diagnosis	By Easy Stand Alone	
VCM	Change configuration	By Easy Stand Alone	HW2 (SW 6,5- 8,5) HW3 (SW 8,55)
	PTO	By Easy Stand Alone	HW2 (SW 6,5- 8,5) HW3 (SW 8,55)
	Change configuration special OPTS	By Teleservices	FMS,EM...,Immobilizzer,Economy Power ... HW2 (SW 6,5- 8,5) HW3 (SW 8,55)
	ECU Replacement (OLD readable/not readable)	By Teleservices	HW2 (SW 6,5- 8,5) HW3 (SW 8,55)
	Storing new Keys on new ECU	By Teleservices	HW2 (SW 6,5- 8,5) HW3 (SW 8,55)
	Adds key	By Easy Stand Alone	HW2 (SW 6,5- 8,5) HW3 (SW 8,55)
	Installation Allison gearbox in After Market	By Teleservices by automatic programming	HW2 (SW 6,5- 8,5) HW3 (SW 8,55)
	Diagnosis	By Easy Stand Alone	HW2 (SW 6,5- 8,5) HW3 (SW 8,55)
EM	PTO	By Easy Stand Alone	SW 1.2/1.3 /1.4
	ECU Replacement (OLD readable)	By Teleservices	SW 1.2/1.3/1.4
	ECU Replacement (OLD Not readable)	By Teleservices	SW 1.2/1.3/1.4
	Installation in After Market	By Teleservices by automatic programming	SW 1.2/1.3/1.4
	Diagnosis	By Easy Stand Alone	SW 1.2/1.3 /1.4
ECM	Change configuration	By Easy Stand Alone	
	Diagnosis	By Easy Stand Alone	
	ECU Replacement (OLD readable/not readable)	By Teleservices/Part Plant	
	Recognition Injectors	By Easy Stand Alone	